

## **THE PLEASURE IS ALL YOURS**


For any additional information, please visit [loradicallo.com/faq](https://loradicallo.com/faq), or contact us at [hello@loradicallo.com](mailto:hello@loradicallo.com).

## **MATERIALS AND QUALITY**

Onda is made from high quality, body-safe materials, including premium silicone and ABS plastic. Our products are phthalate and latex-free and are in accordance with international standards for materials, production, and safety. For more information, please see [loradicallo.com/faq](https://loradicallo.com/faq).

## QUICK START – GET TO KNOW ONDA

- A G-spot Massager** – mimics the touch of a partner's finger to stroke the G-spot using a come-hither motion.
- B G-spot Boost** – rumbling sensations with 10 intensity levels.
- C Protective Cover** – premium cover for clean storage.
- D Power Button** – turns Onda ON/OFF.
- E G-spot Boost Intensity Button** – controls the intensity of the G-spot boost function (+/-) with 10 intensity levels.
- F G-spot Speed Button** – controls the speed of the G-spot Massager (+/-) with 10 stroke speeds.
- G G-spot Stroke Button** – select short or long strokes over the G-spot.
- H Magnetic Charging Points** – magnetically connects to the USB charging cable provided.

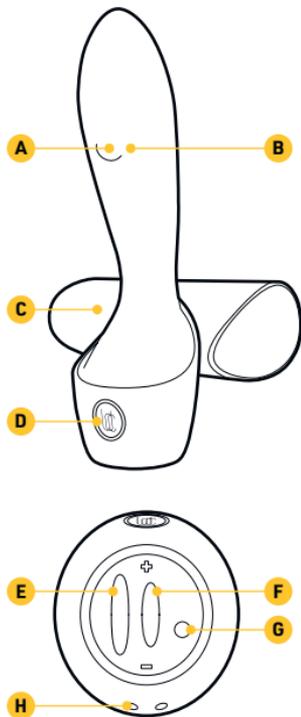


## QUICK START – TIPS FOR FIRST-TIME USE

1. **Only insert or remove Onda when it is fully turned off and the G-spot Massager is completely retracted.**
2. Charge Onda for at least 1 hour before the first use.
3. Wash with mild soap and water or your favorite silicone-safe cleaner.
4. Apply a water-based lubricant or personal moisturizer to the G-spot Massager. Do not use lubricants that contain silicone or oils—this could cause damage to the product and reduce the lifespan of your device.
5. Insert Onda into the vaginal opening with the G-spot Massager facing the front of the body. Explore to find the right position of the massager over the G-spot, it can be different for every person.
6. Press and hold the power button to turn on.
7. Customize your desired stimulation using the stroke, speed, and boost buttons. Take your time to adjust, explore, and enjoy.
8. To end your session, firmly press and hold the power button to turn Onda off before removing your device.
9. Thoroughly clean and dry your device before storing.

## GET TO KNOW YOUR G-SPOT

It is theorized that the G-spot is actually the deeper portion of clitoral tissue. In most people the G-spot is about 1-3 inches (2-8cm) inside the entrance on the front


wall of the vagina. The tissue tends to be slightly firmer and more rigid than the surrounding tissue. Onda is designed to press and stroke the full length of the G-spot.

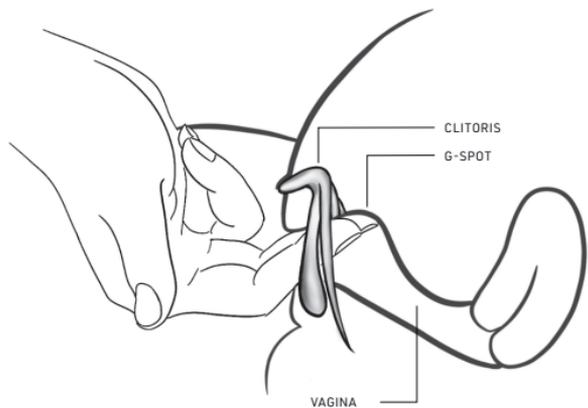

## FINDING YOUR PERFECT FIT

Before first time use, we recommend familiarizing yourself with your own anatomy to understand how Onda will fit comfortably against your body.

It may take a few sessions to explore and find the position and intensity you prefer. Take your time and enjoy the self-discovery!

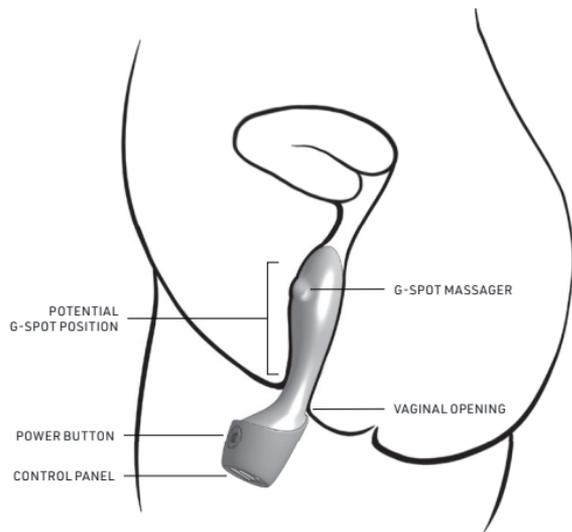

## USING ONDA

- We recommend testing out Onda's functions before inserting into the vagina so you can see all of the options and settings.
- **Only insert or remove Onda when it is fully turned off and the G-spot Massager is completely retracted.**
- Add a small amount of water-based lubricant or personal moisturizer to the G-spot Massager for smooth insertion and use.
- Insert Onda into the vaginal opening with the G-spot Massager facing the front of the body.
- Once inserted, turn Onda on and explore to find a position that presses against the G-spot. Adjust the angle of the massager to press and stroke over the inside front wall of the vaginal canal.

- Each of Onda's functions can be controlled independently, so try out different combinations of stimulation to find your favorite settings.
- Always turn Onda off completely before removing from the vagina. Simply press and hold the power button, then once it is fully off, remove.

### CHARGING ONDA

Charge Onda for at least 1 hour before the first use by placing the magnetic USB charging cable over the two metal dots on the back of the device and connecting to a safe power source.

Once plugged in Onda will display the charging status by gradually lighting the circle around the power button. When the circle is fully lit with a solid white light, your device is fully charged.

**Note:** Do not charge while in water or while the product is wet. Always

make sure the USB charging cable and charging points on the device are completely dry before charging. Use only the official Lora DiCarlo charging cable to ensure safe and effective charging.

### LOW POWER WARNING

The circle light will begin to flutter when there are 5 minutes of use time remaining.

### AUTO-SHUTOFF

If the G-spot Massager or Boost functions are not activated within 5 minutes, Onda will turn off automatically to conserve power.



 
25% charged



50% charged



75% charged



100% charged

## CARING FOR ONDA

### PRODUCT LOCK

To ensure Onda doesn't turn on at the wrong time, such as during travel, you can disable and lock all of the buttons. Simultaneously press and hold the power button and the G-spot stroke button (button G), the LED will flutter rapidly to signify lock. Repeat this combination to unlock the device and the LED will flutter again.

### CLEANING, STORAGE, AND SAFETY

Always clean Onda with mild soap and water or a purpose-made, silicone-safe cleanser before and after each use. Onda is waterproof so you can run it under the faucet or fully submerge it for thorough cleaning. Be sure to clean inside the clitoral mouth as well using a finger, soft cloth, or cotton swab. Wipe dry with a clean lint-free cloth and store in a cool, dry location.

Use only water-based lubricants and personal moisturizers, as oil or silicone-based formulas can damage the materials and reduce the lifespan of your device.

**Note:** Do not boil, microwave, or run Onda through a dishwasher or sterilizer, as extreme heat and harsh detergents can damage the product. Do not use silicone, alcohol, acetone, petroleum, acidic, or alkaline-based products on Onda as it can damage the product materials.

## WARNINGS

**DISCLAIMER:** Users of this Lora DiCarlo product do so at their own risk. Neither Lora DiCarlo nor its retailers assume any responsibility or liability for the use of this product.

Further, Lora DiCarlo reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person. Model may be changed for any improvements without notice.

This product is intended for adults only.

**WARNING: Do not remove or insert your Onda until it is fully powered off. Removal or insertion before the device has fully retracted may result in discomfort, pain or injury or damage to the device. If you experience any pain or discomfort while using Onda, stop use and contact your medical provider.**

## ONDA SPECIFICATIONS

**Materials:** Silicone and ABS plastic

**Insertable Length:** 115mm

**Widest Insertable Width:** 35mm

**Weight:** 90 grams

**Battery:** Rechargeable

**Charging:** 2 hours

**Use Time:** 1 hour

**Interface:** 4 Button

## WARRANTY TERMS & CONDITIONS

Lora DiCarlo products are of the highest quality and come with a 1-year worldwide manufacturing warranty for products purchased from [loradicarlo.com](http://loradicarlo.com) or an Authorized Retailer. Products purchased from an Unauthorized Retailer are not covered under these policies.

In countries mandating a longer warranty time, Lora DiCarlo extends the warranty accordingly.

### REGISTERING YOUR PRODUCT

To claim your warranty you must register your product on [loradicarlo.com](http://loradicarlo.com) and follow the instructions provided to make a warranty claim. If approved you will receive a Return Authorization Code (RAC) which should be included with the defective product when shipping to the provided return shipping address. Shipping

costs are non-refundable. This undertaking is in addition to consumer's statutory rights and does not affect those rights in any way.

Please contact [hello@loradicarlo.com](mailto:hello@loradicarlo.com) if you have any questions about your warranty eligibility or the registration process.

### 1-YEAR WARRANTY

Lora DiCarlo warrants this product for a period of one (1) year after the date of original purchase against defects due to faulty workmanship or materials. If you discover a qualifying defect and notify Lora DiCarlo during the warranty period, Lora DiCarlo will, at its discretion, repair or replace the product free of charge.

The warranty covers working parts that affect the function of the product. It does not cover cosmetic

deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the product (or its accessories) will void the warranty.

### WARRANTY TERMS & CONDITIONS

Claims under warranty must be supported by reasonable evidence that the date of the claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. If you purchased your product on [loradicarlo.com](http://loradicarlo.com) we already have your proof of purchase on file.

To activate your warranty, visit [loradicarlo.com](http://loradicarlo.com), login, and register your device and follow the warranty claim process as indicated.

### DISPOSAL

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).

The crossed-out dustbin symbol indicates that this product should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



## **COMPANY INFORMATION**

Designed in Oregon, USA  
by Lora DiCarlo.

Manufactured by Lora DiCarlo  
in China.

Website: [loradicarlo.com](http://loradicarlo.com)

Support: [hello@loradicarlo.com](mailto:hello@loradicarlo.com)